

Measuring for Curtains

To be sure of the best possible fit, take the time to measure your windows carefully. We suggest using a metal tape measure for accuracy.

The first step is to decide whether you want your curtains to hang from a track or a pole. Whichever option you choose they should be positioned 15cms (6 inches) above the window and extend 15-20cms (6-8 inches) either side.


Fit your track or pole before taking your measurements.

Curtain Width

- Measure the width of your pole between the finials, or the whole length of your track.

Curtain Lengths

- For an eyelet heading, measure from the top of the pole. (Please also make a note of the pole diameter.)
- For all other headings, measure from the eye on the pole ring. If you have a track, measure from the top of the track.

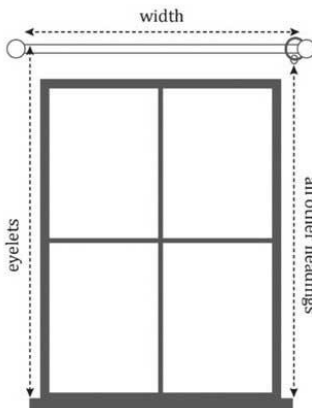

Finished Length

Before measuring the length, decide whether you want your curtains to fall to the sill, below the sill or to the floor. We suggest that:

- Sill length curtains finish 0.5cm above the sill.
- Curtains that fall below the sill to finish 10-15cms (4-6 inches) below.
- Floor length curtains finished to touch the floor. (Another option is to have them puddle (anything between 2-5cm or sitting 1cm off the floor).